

Purpose

Technique PRNTOPER sets the Operation types for which carryover will be printed.

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Universal.

This Technique has 5 Arguments which are the Operation types for which carryover will be displayed.

The Global defaults for all Arguments are blank.

Form of Input

PRNTOPER optypes

where optypes are the Operation types (SAC-SMA is the only valid type)

Example

PRNTOPER SAC-SMA

This will cause carryover for the SAC-SMA Operations to be displayed.